



Banner

Banner Seating Collection

Crypton Fabric

Clean with a soft, damp cloth. Spots can be removed by scrubbing with a mixture of water and enzyme laundry detergent (2 cups water to 1 teaspoon detergent). Tougher stains should be treated professionally. We do not recommend cleaning crypton with any mixture containing bleach.

Vinyl

Clean with a soft cloth dampened with warm water and a mild soap solution. Stubborn stains and spills may be treated with a sponge or soft brush and mild non-abrasive cleanser. For best results please refer to the cleaning instructions of the relevant fabric supplier.

Wood Surfaces

Wood frames and arm caps are protected by a stain-resistant pre-catalyzed finish. For normal cleaning, wipe the surface with a soft cloth dampened with a mild detergent solution. We recommend full-strength or diluted glass cleaning products, because they do not cause surface smearing or haze. A few examples of alternative cleansers include: Bleach, Hi-Tor® Plus, Sani-Master, Ammonia, Sursan, Matar®, TOR® HB, Quat Disinfectant, Virox™, and Virex® CaviWipes™. These cleansers must be used according to the manufacturer's instructions. Avoid chemical and/or abrasive cleaning compounds. We do not recommend using brand-name furniture polishes. While they will not damage the surface, they may cause smearing and haze. Additionally, products containing silicone or wax content should be avoided for best long-term results.



Urethane Arm Caps

Wipe with mild soap and water. Do not use solvents, alcohol or stain removers.

Laminate Surfaces

Dust with a soft, clean cloth. To remove fingerprints, for example, wipe with a soft cloth dampened with warm water and a mild soap solution and rinse with cold water. Stubborn stains can be removed with hot water and a bit of vinegar. Avoid using abrasive cleaning tools such as these may scratch the laminate surface. It may be necessary to use a mild non-abrasive cleanser.

