

These instructions may be used to disassemble all models of our Legend seating line.



Time Required:

8 minutes.

Tools Required:

All models: #2 Phillips screwdriver; flat blade screwdriver; hammer; knife (preferably a box cutter).



A: Turn the chair upside down and remove the upholstered seat cushion by removing the four #2 Phillips screws.




B: Set the chair upright. Standing behind the chair unzip the zipper that is under the bottom edge of the back. Pulling up

the fabric will expose the screws securing the chair back to the chair frame.



C: Using the #2 Phillips screwdriver remove the six screws securing the back.

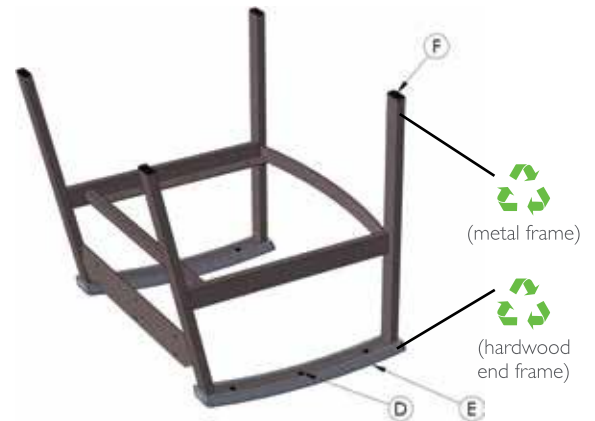

D & E: Place the chair upside down or on its side. Next, using the #2 Phillips screwdriver; remove the three screws attaching each arm cap to the frame. Take the flat blade screwdriver and hammer knock out the glide free from each leg.

Upholstery and foam Removal




Chair Back

Using a knife, carefully cut the upholstery next to the staples securing the upholstery to the wood panel. Next, take the knife (preferably a box cutter) and carefully slice the foam away from the wood back panel. Remove the fabric and foam.

Chair Seat

Using a knife, carefully cut the upholstery next to the staples securing the upholstery and dust cover to the wood seat panel, as well as the elastic mesh. Remove the fabric and then take the knife (preferably a box cutter) and carefully slice the foam away from the wood panel.

Material Breakdown

Quantity	Component	Material
1	Chair frame	Steel 
4	Glides	Nylon
2	Arm Caps (polyurethane must be stripped from internal metal bar)	Steel/Polyurethane 
2	Arm Caps (optional)	Hardwood 
2	Panels – seat and back	Plywood
1	Seat elastic mesh	Hytrel elastomer polyester composite
1	Dust cover	Vinyl
2	Upholstery pieces - seat and back	Vinyl or fabric
2	Seat and back	Foam
Various	Staples and various fasteners	Steel 